

### QUICK START GUIDE

### ESAT20

#### Quick Start Guide

The UPS is shipped in standby mode and needs to be activated.


1. Connect the UPS to mains power
2. Connect operator to UPS
3. Press and hold buttons A. and B. together (approx 2 seconds)
4. Wait 7 seconds
5. UPS will beep twice. Operator will power up

Please refer to Upsonic ESAT20 Manual for more information.

#### Compatibility

Compatible with single-phase Grifco operators max 1.0Hp including:

- eDrive +2.0 RKML Operators
- eDrive +2.0 Operators
- mDrive Operators
- Fire Shutter Operators
- Poultry Winches

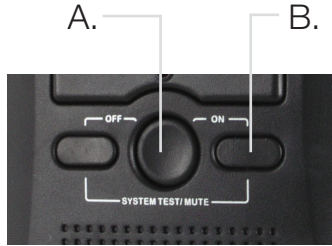

Product may differ slightly from image shown.

#### Model Details

Part No.	ESAT20
Description	UPS System 2.0KVA

#### Chamberlain Australia Pty Ltd

Head Office - Unit 1, 75 Epping Rd North Ryde NSW 2113  
Manufacturing - 15 Dell Rd, West Gosford NSW 2250

#### Chamberlain New Zealand Ltd

17A Arrenway Dr, Rosedale 0632 Auckland NZ

AU: 1800 GRIFCO | [www.grifco.com.au](http://www.grifco.com.au)  
NZ: 0800 653 667 | [www.grifco.co.nz](http://www.grifco.co.nz)

#### Chamberlain Branches

Sydney - Unit 1, 75 Epping Rd North Ryde NSW 2113  
Melbourne - Unit 18, 85-91 Keilor Park Dr Tullamarine VIC 3043  
Brisbane - Unit 19, 140 Wecker Rd Mansfield QLD 4122  
Perth - 54 Milrose Dr Malaga WA 6090