

For use with eDrive+ 2.0 with radio-on-board.

WIRELESS WALL CONTROL – MODEL E138G




WARNING

To prevent possible SERIOUS INJURY or DEATH from a moving door:


- Use Wireless Entry Device within sight of the door and out of reach of children
- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote controls.
- Activate door ONLY when it can be seen clearly, is properly installed, and there are no obstructions to the door travel.
- ALWAYS keep the door in sight until completely closed. NEVER permit anyone to cross the path of a moving door
- NEVER allow small children near batteries. If battery is swallowed, immediately notify your doctor.

GRIFCO FRONT PANEL

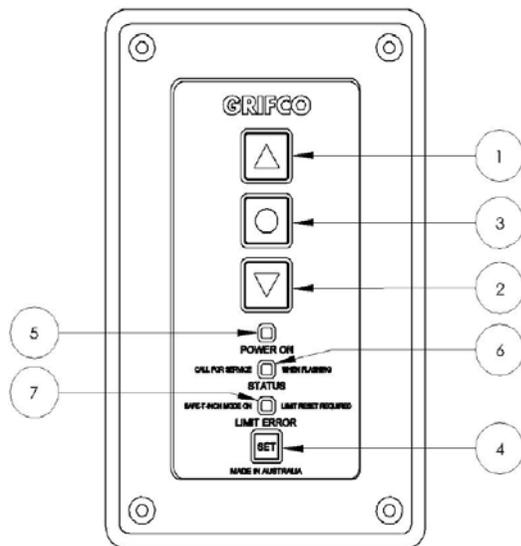

1. **UP** - Moves the door upwards
2. **DOWN** - Moves the door downwards
3. **STOP** - Stops the door
4. **SET** - SET button
5. **POWER ON** - Shows when the unit is mains powered
6. **STATUS** - Shows the status of the unit
7. **LIMIT ERROR** - When lit indicates limits are not set

PROGRAMMING

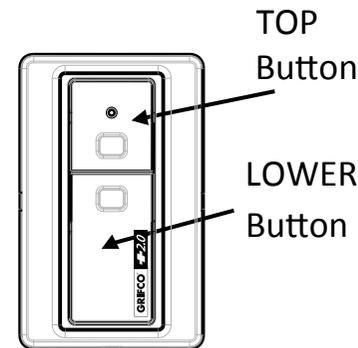

E138G Wireless Wall Control

To program the **E138G** Wireless Entry Device ensure the radio lock is removed then perform the following steps:

1. Press and hold the **SET** button on the GRIFCO front panel, then
2. While holding the **SET** button, press the **STOP** button 5 times (the **green** status light will light then continue flashing, indicating learn mode)
3. Let go of the **SET** button
4. Press the **E138G TOP** button
5. Then press the **E138G LOWER** button
6. The orange **LIMIT ERROR** light will flash each time to acknowledge the button has been pressed.
7. Press **STOP** button on the GRIFCO front panel (the green light will continue to flash).
8. Press the **E138G LOWER** button again
9. The green light will go out indicating exit learn mode.
10. Install the **RADIO LOCK** key on the eDrive2 board to prevent any further wireless entry devices being learned.

OPERATION

The E138G TOP button can be used to TOGGLE the action of the door between *close / stop / open* if an obstruction detection device is installed, or *stop / open* only if no obstruction detection device is installed.

The E138G LOWER button can be used to CLOSE the door. If no obstruction detection device is installed, the LOWER key must remain pressed to complete the door close sequence.

WARRANTY

ONE YEAR LIMITED WARRANTY

Chamberlain warrants to the original purchaser of this product that it is free from defect in materials and/or workmanship for a period of 1 year from the date of purchase.

Note: Batteries are not covered by warranty