

For use with *eDrive +2.0* boards that come standard with **Security+ 2.0** radio-on-board

The door opener activates on button press.


## WIRELESS ENTRY DEVICE – MODELS E943G and E945G

### WARNING

To prevent possible **SERIOUS INJURY** or **DEATH** from a moving door:


- Use Wireless Entry Device within sight of the door and out of reach of children
- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote controls.
- Activate door ONLY when it can be seen clearly, is properly installed, and there are no obstructions to the door travel.
- ALWAYS keep the door in sight until completely closed. NEVER permit anyone to cross the path of a moving door
- NEVER allow small children near batteries. If battery is swallowed, immediately notify your doctor.

### GRIFCO FRONT PANEL

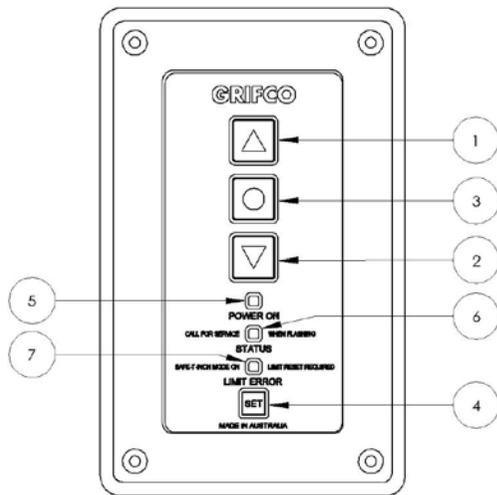

1. **UP** - Moves the door upwards
2. **DOWN** - Moves the door downwards
3. **STOP** - Stops the door
4. **SET** - SET button
5. **POWER ON** - Shows when the unit is mains powered
6. **STATUS** - Shows the status of the unit
7. **LIMIT ERROR** – When lit indicates limits are not set

### PROGRAMMING

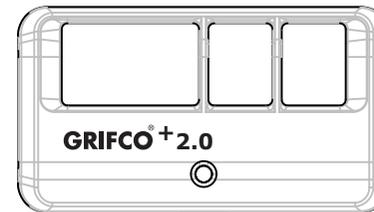

E943G Wireless Entry Device



E945G Wireless Entry Device

To program the Wireless Entry Device ensure the radio lock is removed then perform the following steps:

1. Press and hold the **SET** button on the GRIFCO front panel, then;
2. While holding the **SET** button, press the **STOP** button 5 times (the **green** status light will light then continue flashing, indicating learn mode)
3. Let go of the **SET** button
4. Press a button on the Wireless Entry Device
5. The orange **LIMIT ERROR** light will flash to acknowledge the learned device.
6. Press another button until all buttons and/or devices are learned.
7. Press **STOP** button on the GRIFCO front panel to exit learn mode.
8. Install the **RADIO LOCK** bridge on the eDrive2 board to prevent any further wireless entry devices being learned.

### OPERATION

The wireless entry device can be used to **TOGGLE** the action of the door between **close / stop / open** if an obstruction detection device is installed, or **stop / open** only if no obstruction detection device is installed.

### WARRANTY

#### ONE YEAR LIMITED WARRANTY

Chamberlain warrants to the original purchaser of this product that it is free from defect in materials and/or workmanship for a period of 1 year from the date of purchase.

Note: Batteries are not covered by warranty